
Front Bumper Fascia Air Deflector Replacement


Removal Procedure

1. Raise the vehicle. Lifting and Jacking the Vehicle

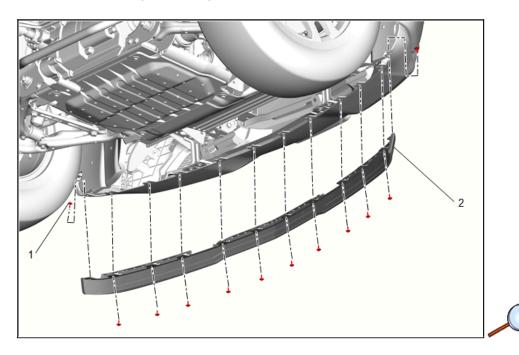

- 2. Front Bumper Fascia Air Deflector Bolt (1) » Remove [12x]
- 3. Pull the front bumper fascia air deflector (2) from the front impact bar.

Installation Procedure

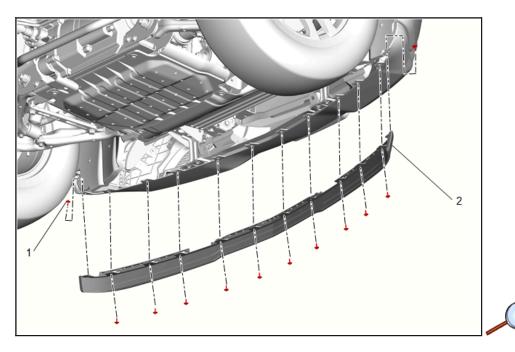

- 1. Front Bumper Fascia Air Deflector (2) » Install
 - Caution: Refer to Fastener Caution.
- 2. Front Bumper Fascia Air Deflector Bolt (1) » Install and tighten [12x] Fastener Specifications
- 3. Lower the vehicle.